




## Hardy Rib Snow Rail Installation Guide

- Use 2" or larger EPDM Rubber washered screws.

- Install the snow rail at the line of screws that is between 24" and 30" up the roof.

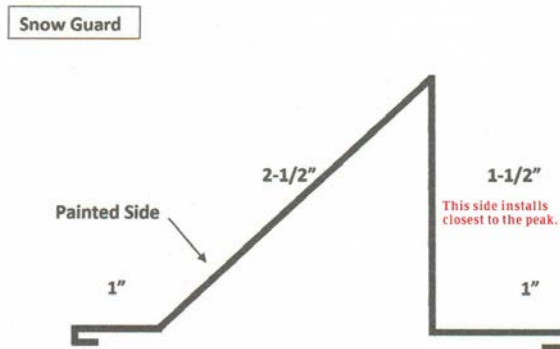

- If purlins are installed under the metal roof, fasten the side closest to the ridge to the purlins. Fasten the back side enough to not deform the steel panels.
- These snow rails are installed horizontally across the major ribs. (See picture below).
- They can be installed staggered or in a straight line.
- Every twelve foot of roof panel should have a line of snow rail for best results.

